

WiFi Heating Room Thermostat
TP201 User Guide



Application

This thermostat range has been developed to control electric underfloor or water heating or water/gas boiler system. These units are designed for use in commercial, industrial, civil and domestic properties.

Thermostat all passed CE and Rohs standard.

Thermostat box you will find

Application	water heating	Gas boiler heating	Electric heating
Thermostat	✓	✓	✓
Manual	✓	✓	✓
Screws	✓	✓	✓
QC pass certificate	✓	✓	✓
External sensor	✗	✗	✓


Features

- ◆ Very Simple home screen
- ◆ Acrylic face plate
- ◆ Large, backlight display
- ◆ Modern design
- ◆ Touch control panel
- ◆ 5+1+1 six periods per day programming
- ◆ Simple, one-touch temperature control over-ride .
- ◆ Pre-set temperatures maintained within +/- 1°C
- ◆ Internal and external sensors allow control of both room and floor temperatures
- ◆ Suitable for installation 86box or European 60mm round box
- ◆ WIFI/ZIGBEE/MODBUS communication optional

Technical Data

- Sensor : NTC 3977 10K
- Accuracy : ±1°C
- Power Consumption : < 1.5W
- Timing Error : <1%
- Power Supply : 95 ~ 240VAC, 50 ~60Hz
- Current Load : 5A (water heating, gas boiler), 16A (electric heating)
- Shell material : PC+ABS (flame retardant)
- Dimension : 86x86x13.7mm
- Ambient Temp. : 0-45°C, 5-95%RH (Non-condensing)
- Storage Temp. : -5-55°C
- Installation Hole distance: 60mm


LCD Display Reference

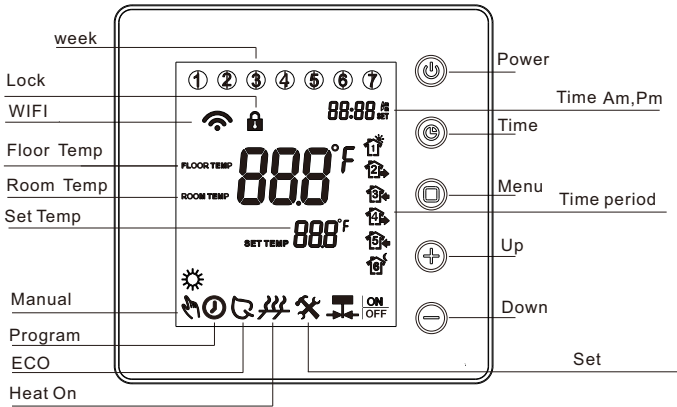


Operation

1. You could press this button to power on/off your thermostat
2. Time setting: Press button to set min/hour/Week.
3. Manual/program setting:
 - a. **manual mode:** Press button to select manual mode. When you Choose manual mode. The symbol will show the left corner of LCD, Press + - to set the desired temperature.
 - b. **Program Mode:** press button to select program mode. When you choose this mode. The symbol will show on LCD, press button above 5seconds to set the desired (5+1+1)six periods time and temp
 - c. **Temperary mode:** During program mode. If you need change temp. The button will show on LCD. The pre-program setting will return in next period
4. Child lock set: Press an hold the + - button above 5seconds to lock/unlock your thermostat
5. Programm go back factory setting: Press button above 5 seconds to enter program mode. Press and hold the + - button above 5seconds when the "def"flash in the LCD. It is go back factory settings sucessful

Dimension

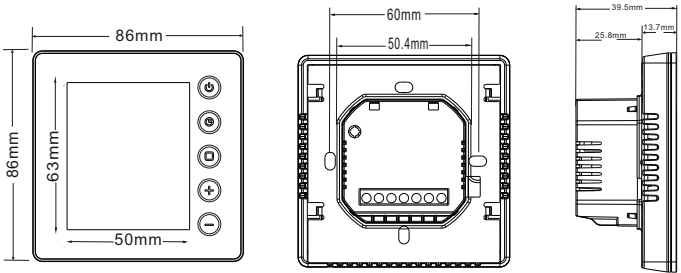

Wiring Diagram

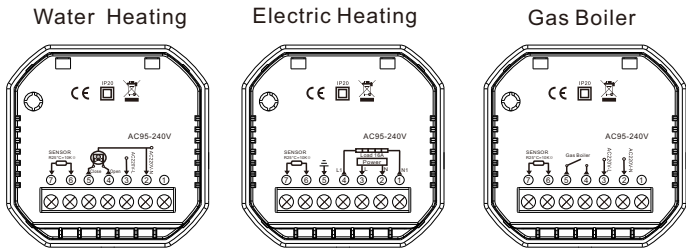

Electric heating has external sensor
Water heating and Gas boiler heating without external sensor

Configuration Menu

Long press button above 7sec to enter this menu when power off .During this menu, short press to change parameters
Press to confirm the setting

No.	Function	Press+ -to set	Default
1	Calibration	-9°C to 9°C	0°C
2	Dead Zone	0.5°C to 5°C	1°C
3	Lock	0: All buttons will lock 1: All buttons will lock except the Power button	1
4	Sensor Selection	IN:= control temperature using the internal sensor OU:= control temperature using external sensor ALL:= Both inner and external sensor	ALL
5	Minimum temperature setting	5°C to 15°C	5°C
6	Maximum temperature setting	15°C to 45°C	35°C
7	High temperature protection setting	25°C-70°C	45°C
8	Anti-freez tempreature range	2-10°C	5°C
9	Anti-Freez protection	0: Off 1: ON	0
10	ECO mode	0: Off 1: ON	0
11	ECO Temp set range	5°C to 30°C	16°C

Note: Water heating&Gas boiler heating Item4 select IN Electric heating item4 select ALL In All sensor mode. Press + buttons at the same time You could check floor temperature.

Program Setting


When power on, Long press into programmable. Press to change the different items. Press + or - to set the relative values. The order is 1-5 week adjusting → Hour adjusting → Temperature adjusting from period 1-period 6 ("1-5", "6", "7", is "5+1+1" programmable mode, every day has six time zones and a time temperature setting)

Time display	Weekday(1-5)		Weekend(6)		Weekend(7)	
	Time	Set Temp	Time	Set Temp	Time	Set Temp
Period 1	6:00	22°C	6:00	22°C	6:00	22°C
Period 2	8:00	16°C	8:00	16°C	8:00	16°C
Period 3	12:00	22°C	12:00	22°C	12:00	22°C
Period 4	14:00	16°C	14:00	16°C	14:00	16°C
Period 5	18:00	22°C	18:00	22°C	18:00	22°C
Period 6	22:00	16°C	22:00	16°C	22:00	16°C


Installation

Your thermostat is suitable for installation within a standard 86mm pattress box or European 60mm round pattress box.


1. Keep power off. Remove the mounting Plate.

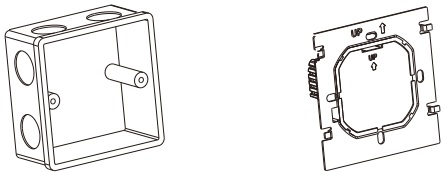

2. Connect power supply, load and external (floor) sensor into the appropriate terminals if there is external sensor. (see "Wiring your thermostat" for details and Fix the mounting plate into the wall with screws in the box.

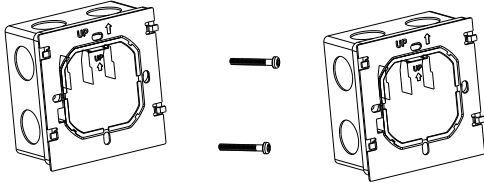

3. Fasten body of thermostat and the mounting plate through the groove. Installation complete.

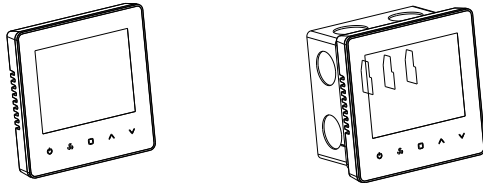

RISK OF ELECTRICAL SHOCK. Disconnect/isolate power supply prior to making electrical connections. Contact with high voltage components can cause electrical shock, severe injury or death.

WIFI Connection and app use explanation

Please try to make sure the router or modern closely with your mobile phone when first time to connect WIFI with your smart thermostat . This will help you connect WIFI sucessful more fastly.

Step 1.Please download the App (Fig1-1, Fig2-2)



Fig 1-1



Fig1-2

For IOS devices could search”Tuya Smart”or “Smart Life”app in app store.Or scan the QR code above(Fig1-1, Fig2-2)

For Android devices could search”Tuya Smart”or ”Smart life”app in google play store.Or scan the QR code above(Fig1-1, Fig2-2)

Step 2. Register your account

Open "Smart Life" app.You will get a notification (Fig 2-1),Click Agree to go into your page of register (Fig 2-2). Press register and enter your phone no. or email (Fig 2-3) then you can get a verification code (Fig2-4). Set your password and confirm (Fig 2-5) to complete your registration..If you have account, please log in.

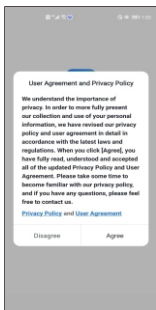


Fig 2-1



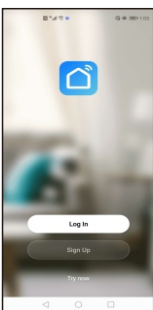



Fig 2-2

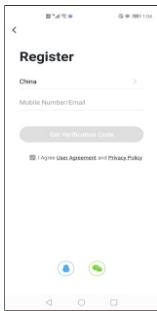

(Fig2-3)

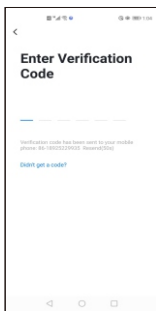

(Fig2-4)

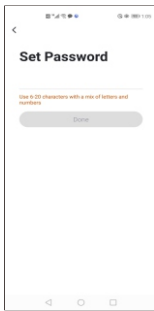

(Fig2-5)

Step 3 Connect WIFI signal with thermostat

Note: There are two WIFI signal connection way to your thermostat, EZ mode and AP mode Default is EZ mode(AP mode is slowly connection way, do not suggest to use)

EZ MODE WIFI connection

1.Please make sure your thermostat is power on. Press the button more than 5seconds.WIFI symbol will flash one time per 0.5 second.

Then go to the app page see the picture (Fig3-1) bellow press “Add device”or”+”in the upper right to add your device. Choose- small appliance device-add manually -Thermostat (Fig3-2).Then enter your wireless router and password(Fig3-3) confirm next button (Fig 3-4). The app will connect automaticlly (Fig3-5). This will take 12seconds to connect sucessfully (Fig3-6)

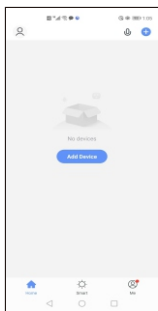


Fig3-1

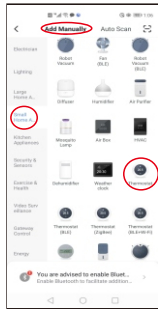


Fig 3-2

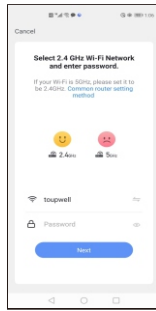


Fig 3-3

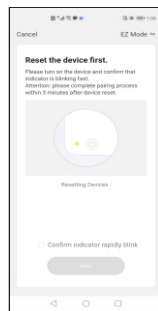


Fig3-4

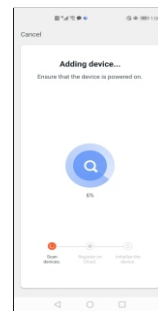


Fig 3-5

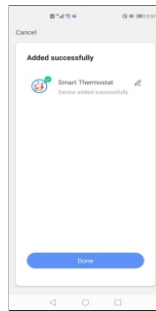


Fig 3-6

AP MODE wifi connection

1.On your thermostat

Please make sure your thermostat power is on. Press the button ,wifi symbol flash one time per second.

Click Confirm indicator slowly blink (Fig 4-1) then select your network and back to your app to enter the password of your wireless router (Fig 3-3) and confirm. The app will go into the page in (Fig 4-2). Press Go to connect to select the wif signal Smartlife-XXXX of your thermostat (Fig 4-3) .

Then Go back to your app the app will connect automatically(Fig3-5).This will take 12seconds to connect sucessfully (Fig3-6)

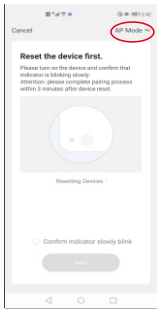


Fig4-1

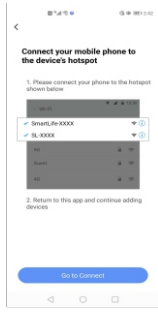


Fig4-2



Fig4-3

App Buttons explanation

When you thermostat connect succussfully.The page will same as (Fig 5-1).

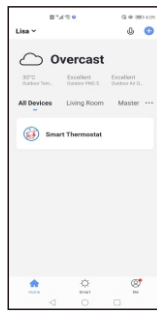


Fig5-1

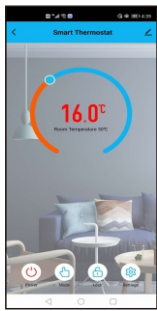


Fig5-2

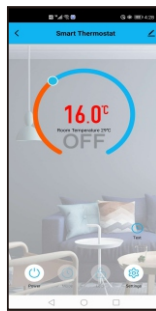


Fig5-3

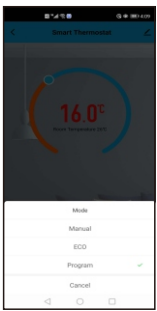


Fig5-4



Fig5-5

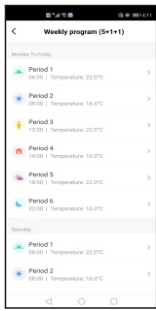


Fig5-6

: Power On/Off button. See page (fig5-2) When the button red is power on (fig5-2) . The button blue is power off (Fig5-3) .

: Select manual/program/eco mode here. Manual mode : In this mode, you could change the setting manually

Program mode In this mode, you could programmable your thermostat click the button in the left side circle in red. see page (fig5-5). You can change the week days and weekend's temp and time. 6 events each day (fig5-6), click on SAVE and the app will send the programming to your thermostat and confirm the schedule has been saved Thermostat will run as your pre-setting schedule.

Eco mode : In this mode. Thermostat will run in 16 degree factory setting. This temp can't change on your app. (Thermostat configuration could change temp)

: Select lock/unlock your thermostat. When the button in red it means lock. Unlock status The button will be blue.

: This is setting button. You could select temperature compensation, Forest protection function and back to factory setting. see page (fig5-7) .

Where to connect with thrid party access service-Voice control?

In this page (Fig6-1), You could click in the upper right side button. Go into page (Fig 6-2) Or in the page (Fig6-3) click “me” to enter more service (Fig6-4) select voice contro Alexa. Google. T.FTTT, Smart things etc. I

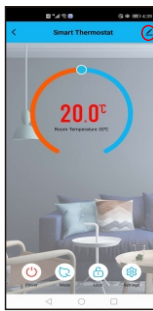


Fig 6-1

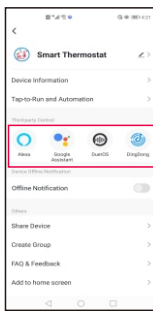


Fig6-2

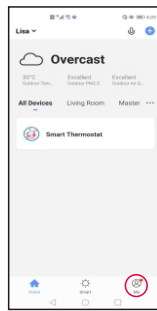


Fig6-3

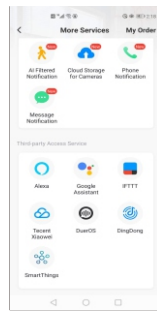


Fig6-4

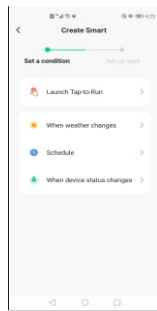


Fig6-5

You could also choose” share devices” and “creat group” with your family. See page (Fig6-2) Choose the “smart” button (Fig6-3) Customize your own personal scenes to suit your needs. (Fig6-5)

Thermostats Trouble Shooting

NO.	Phenomenon	Handling method
1.	Room temp is litte different from the actual temp	You could use thermostat temperature compensation to change the temp to be the same
2.	When the thermostats show ERR	This means you need to connect your external sensor
3.	Power on but not display	Please check weather you connect correct wires or your thermostat is connect well.

Thermostat Warranty

We will provide 2 years warranty for our dear customers. During this period, if the products Have quality issue. We will replace or fix for you. If the problem is not quality issue or override The warranty time. You may need charge for it.